
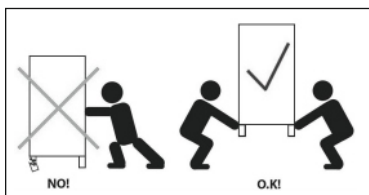




REST R03

Szafa 3 drz.

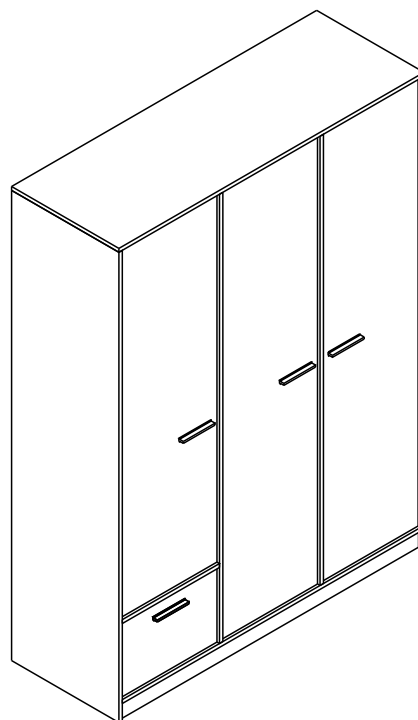





- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı

- (GB) Assembly instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

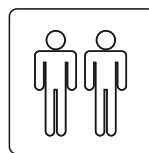

3 - 3,5

1

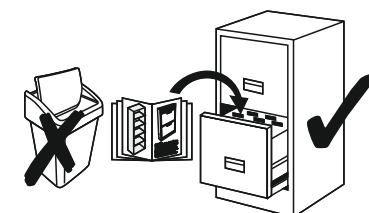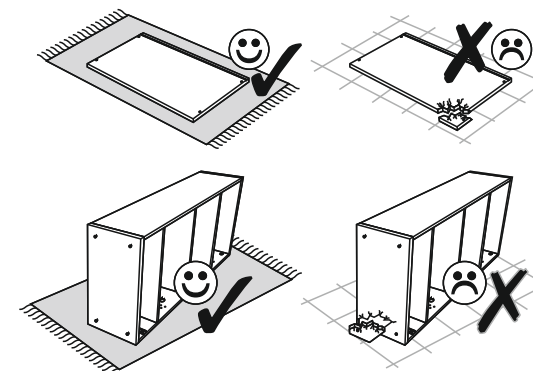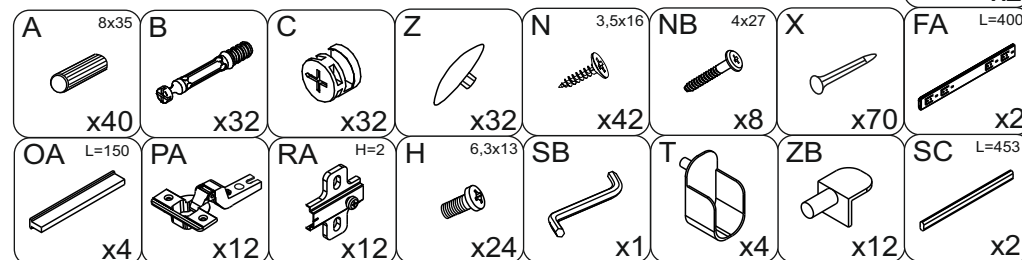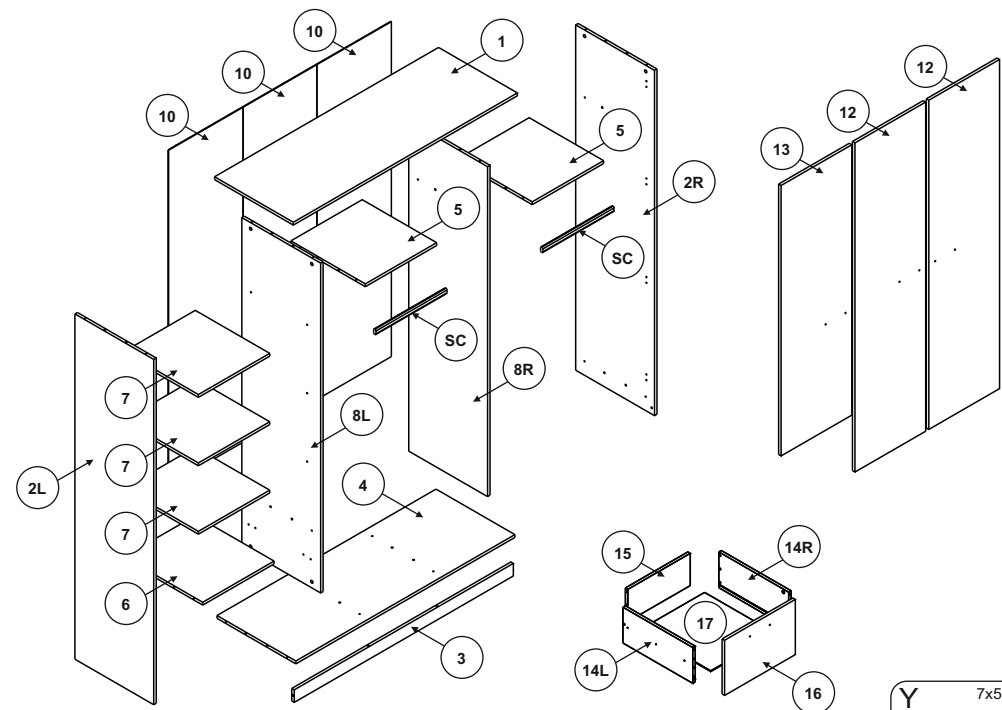


2

FA



L=400



x2

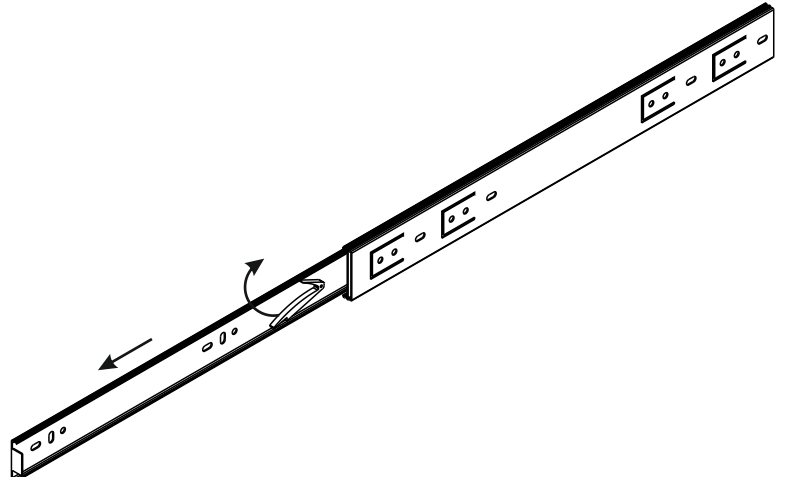

3

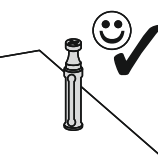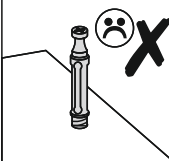N

3,5x16

x4

A

8x35

x4

B

x8

FA

L=400

x1

RA


H=2

x8



H

6,3x13

x16

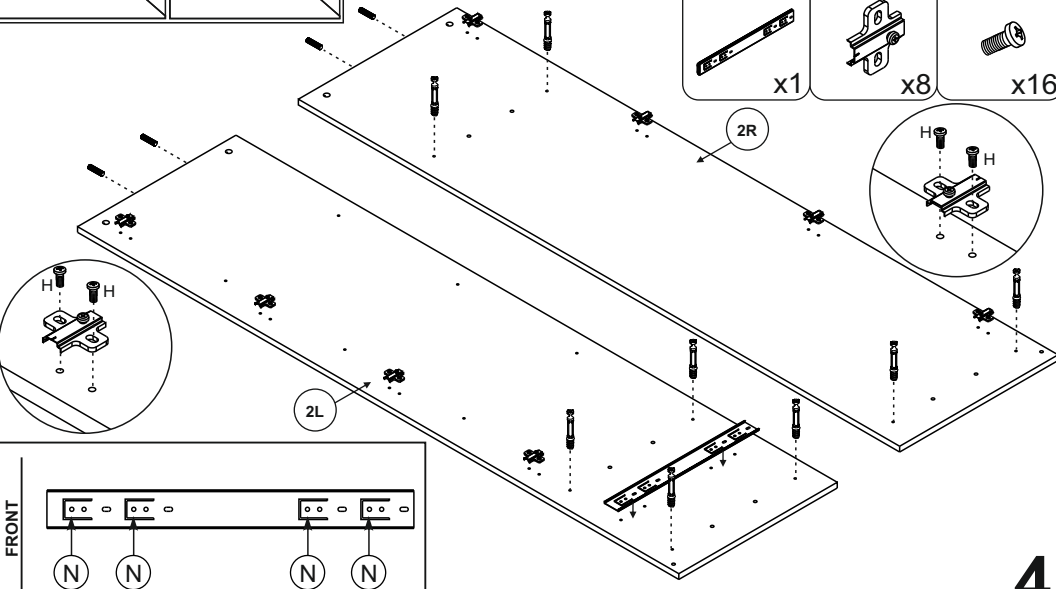

4

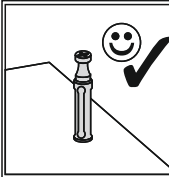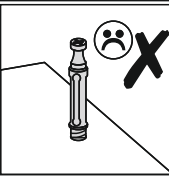N

3,5x16

x4

A

8x35

x4

B

x4

FA

L=400

x1

RA


H=2

x4



H

6,3x13

x8

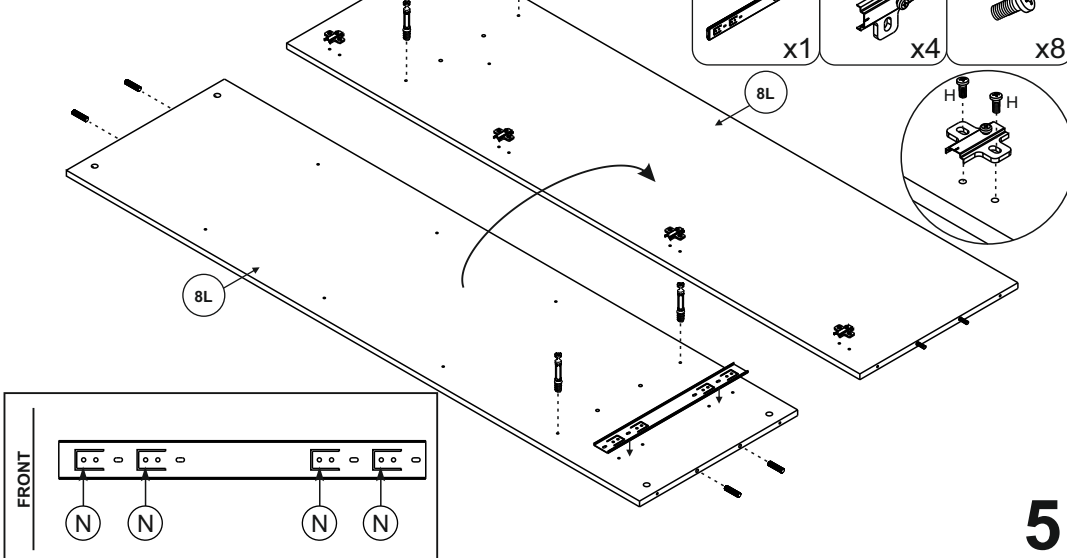

5

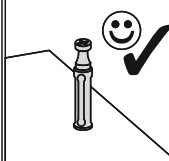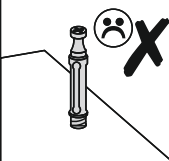
A

8x35





x4





B

x4

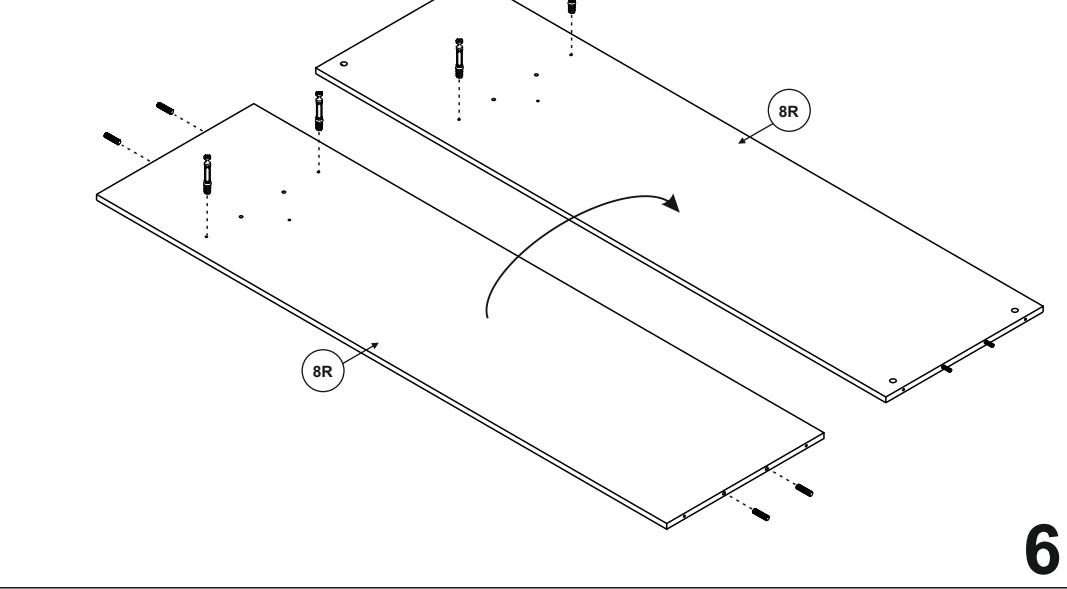


6

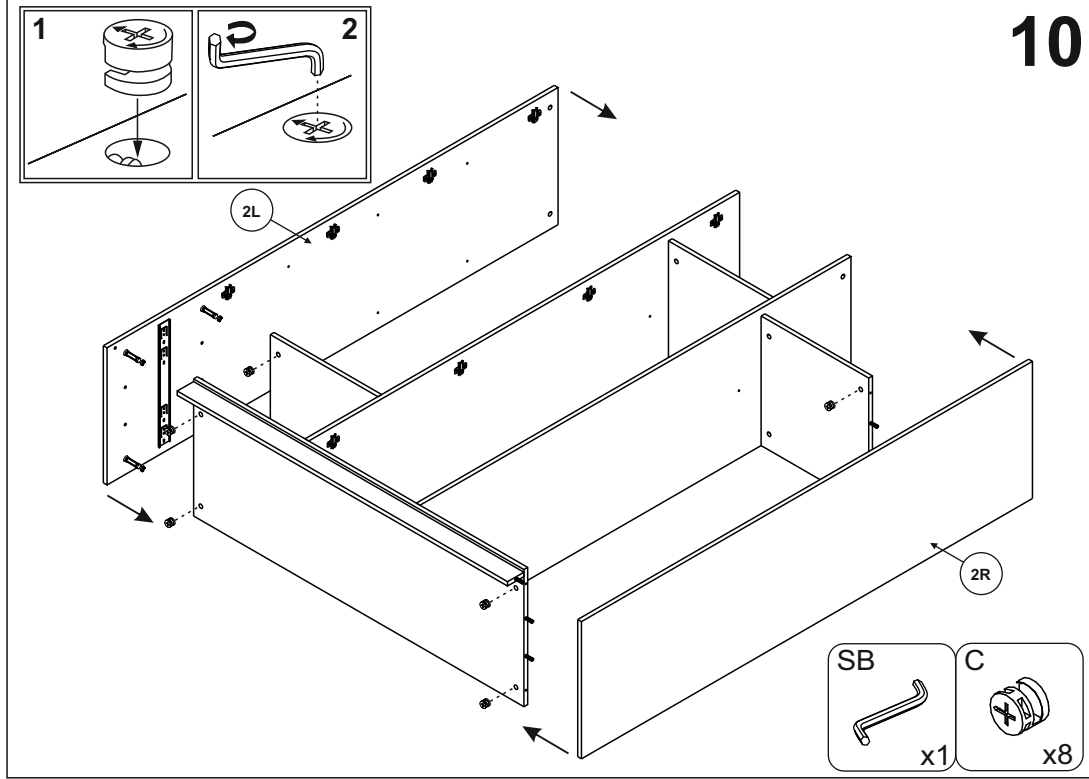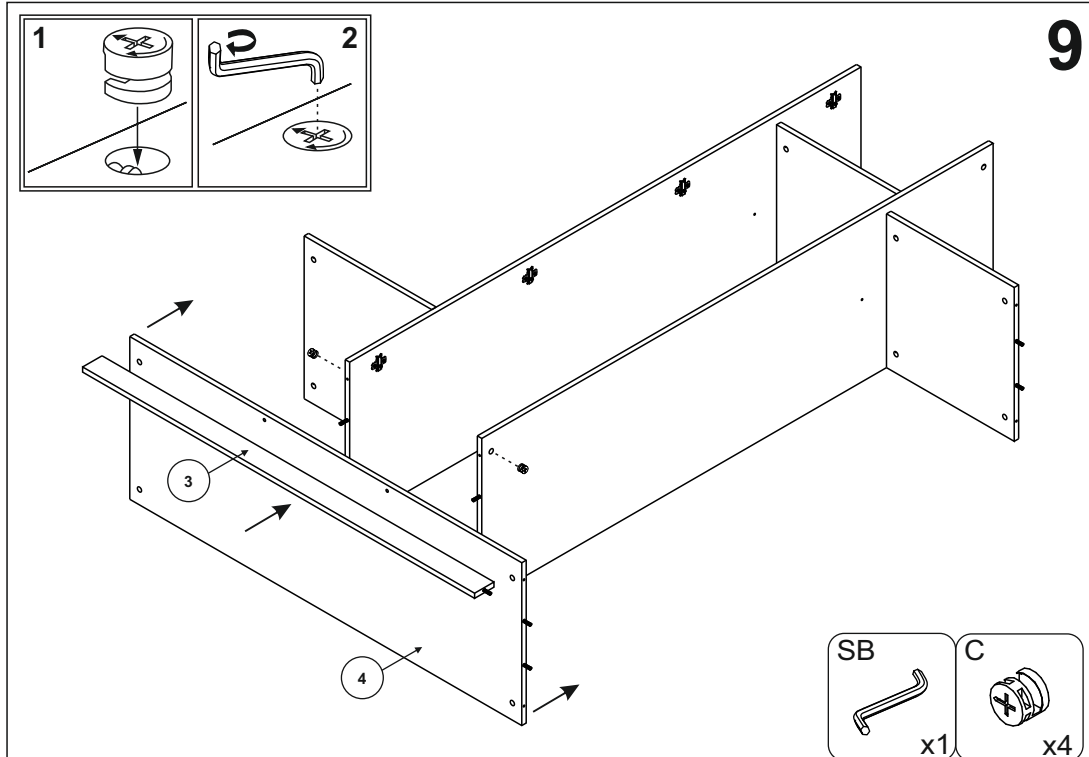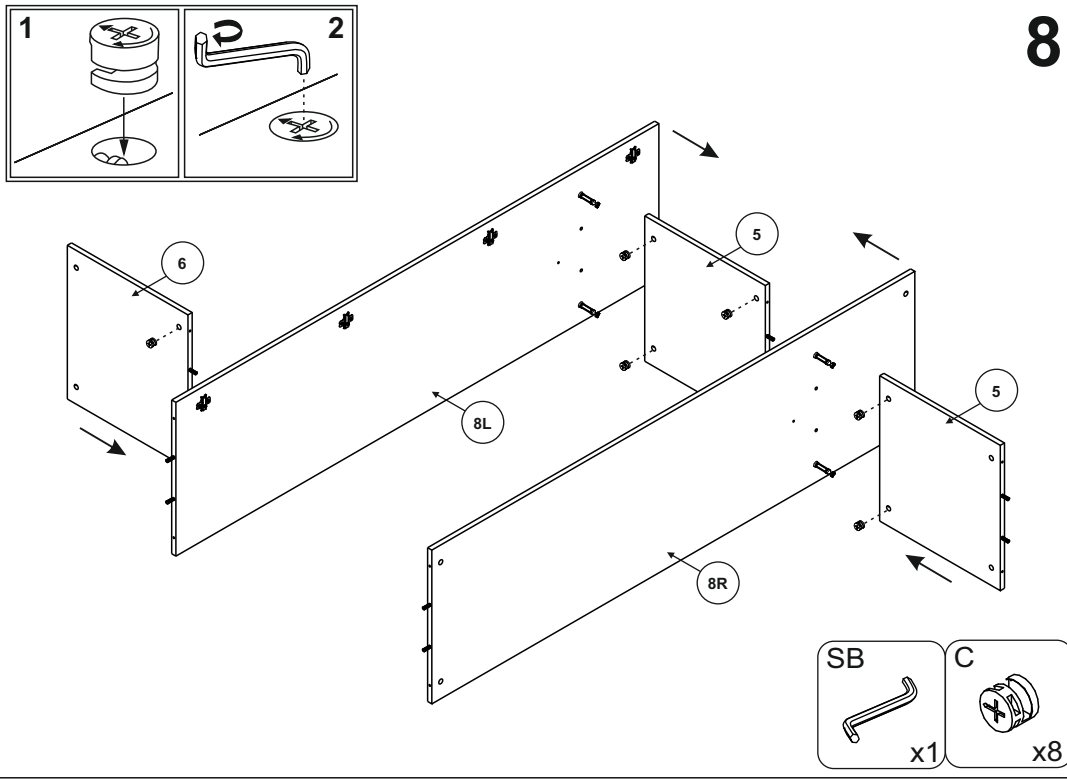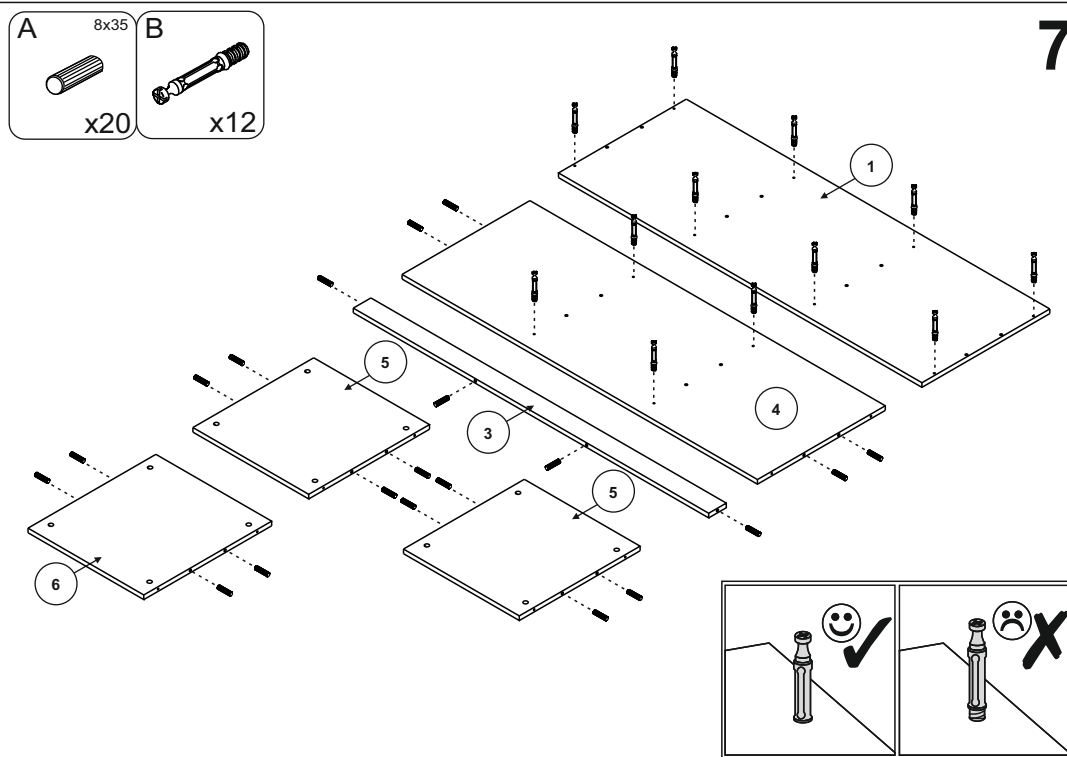


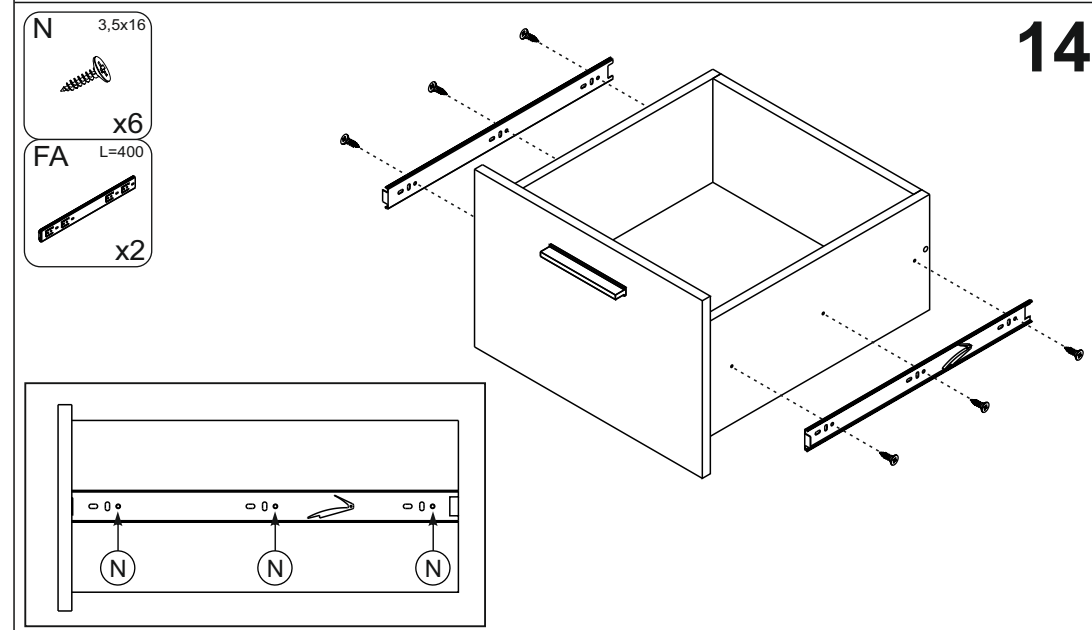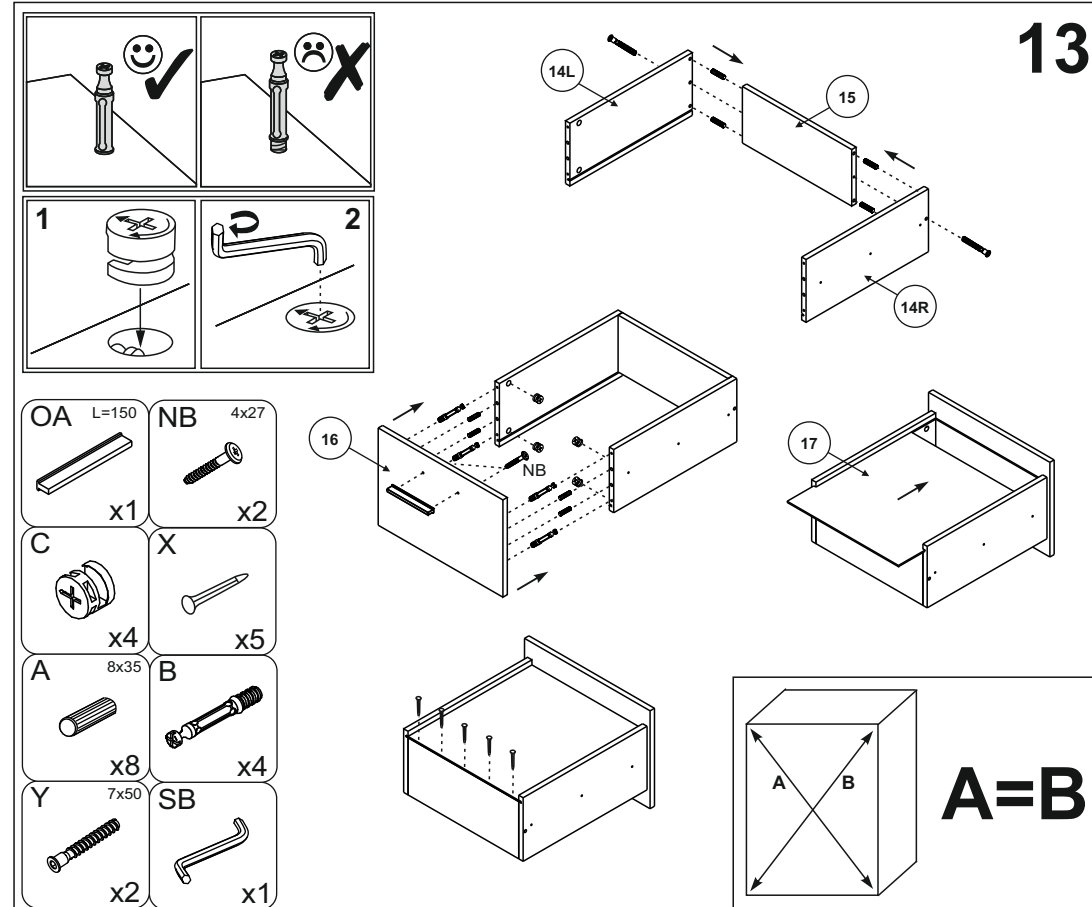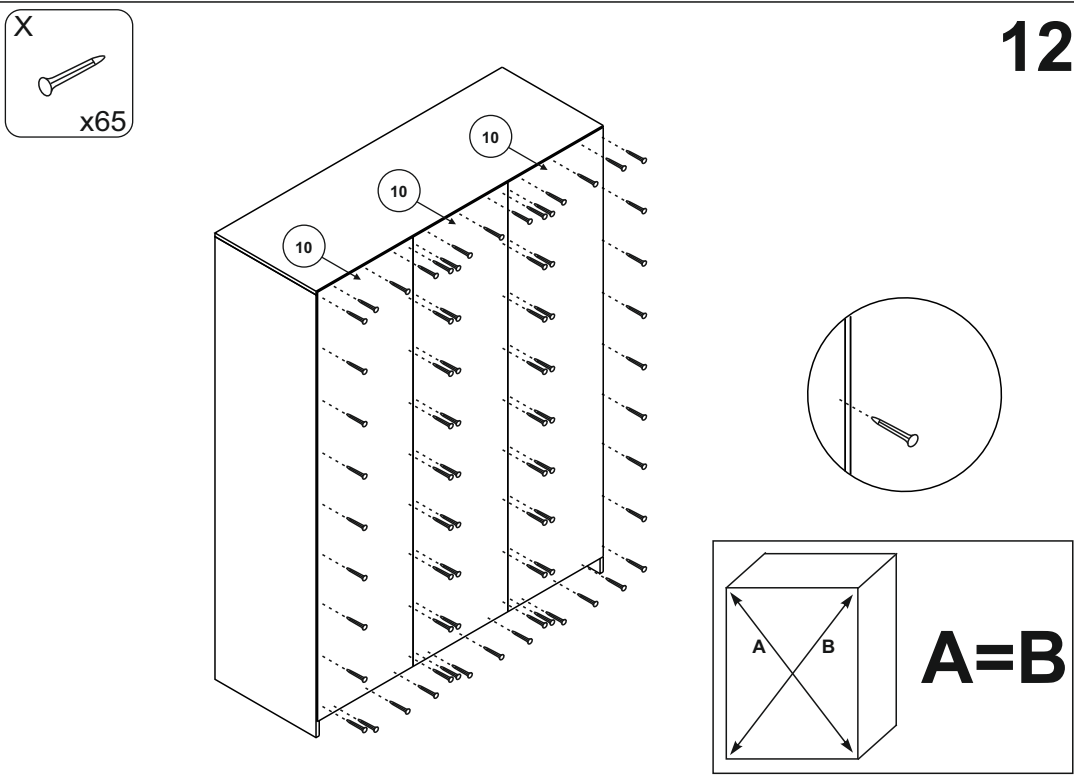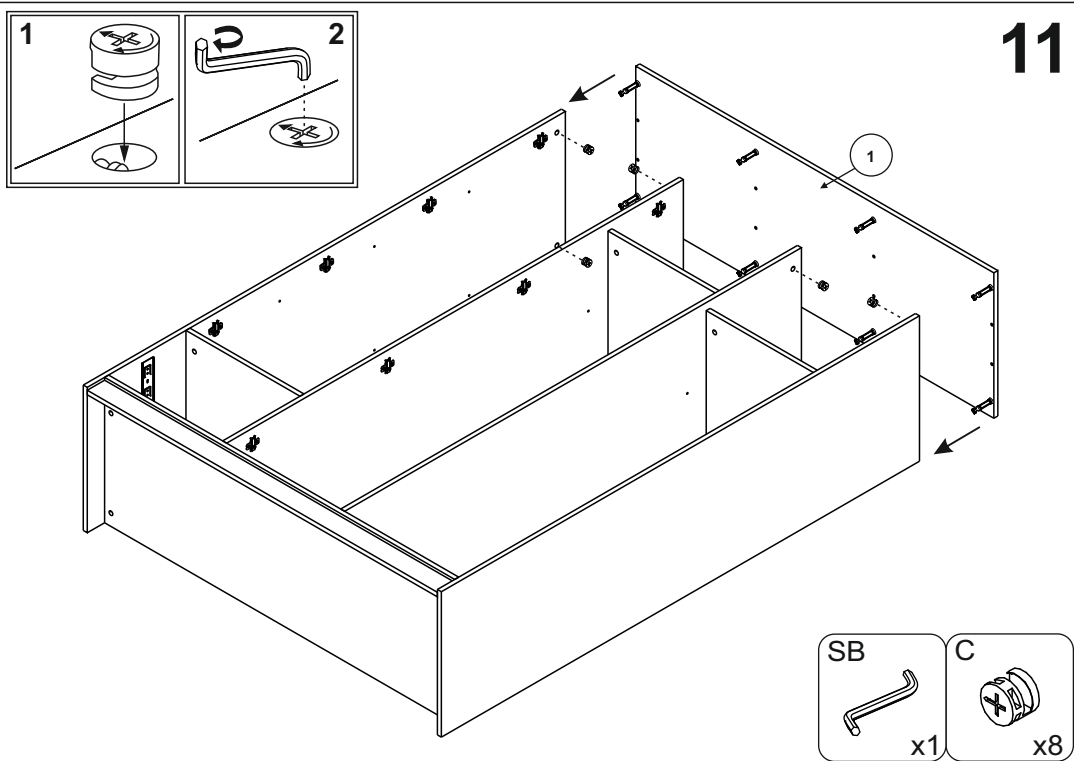



15

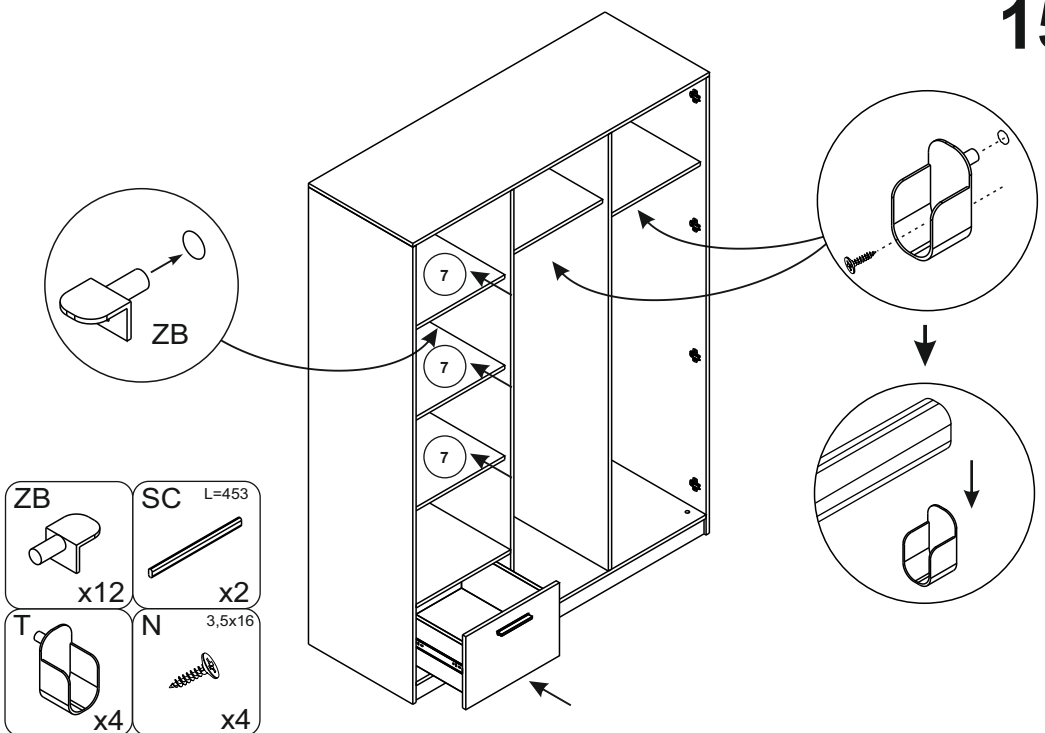

17

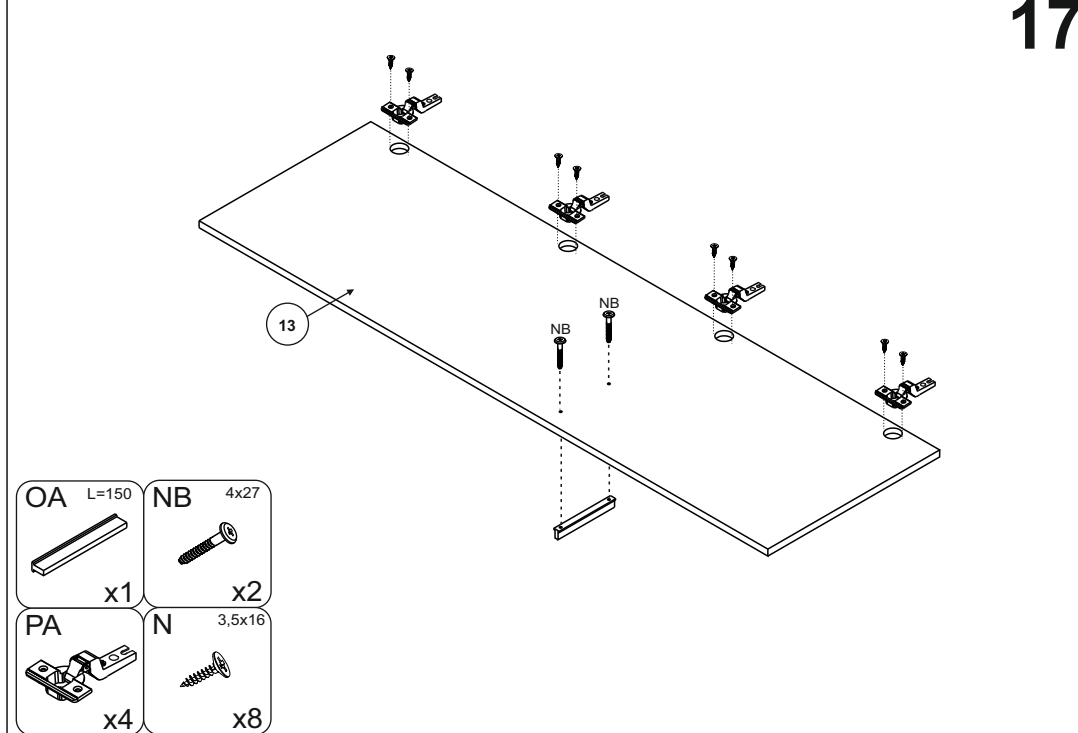

16

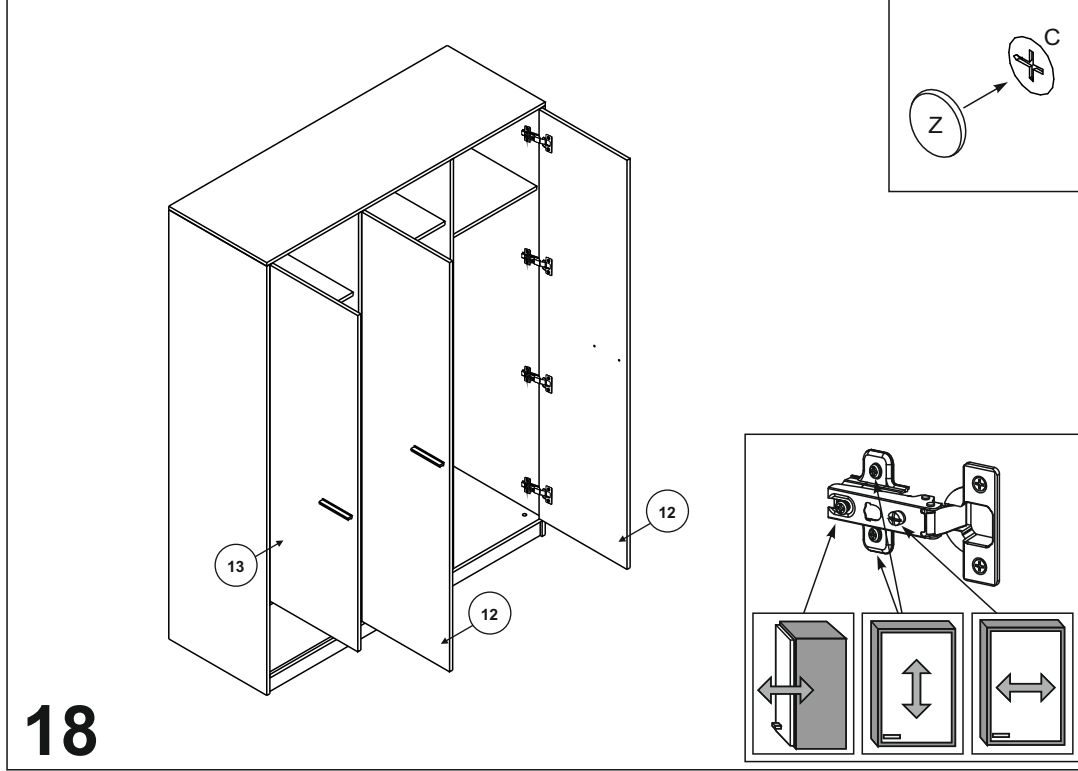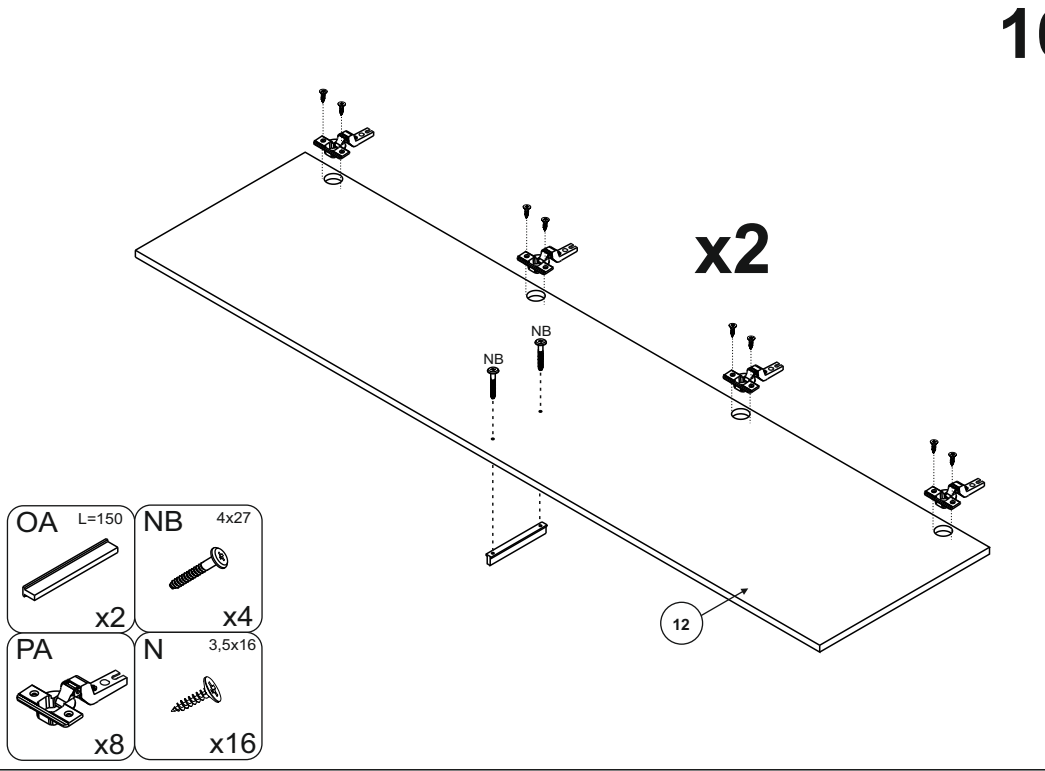

18